



## INSTALLATION MANUAL

Apply Thread Lock to all Screws

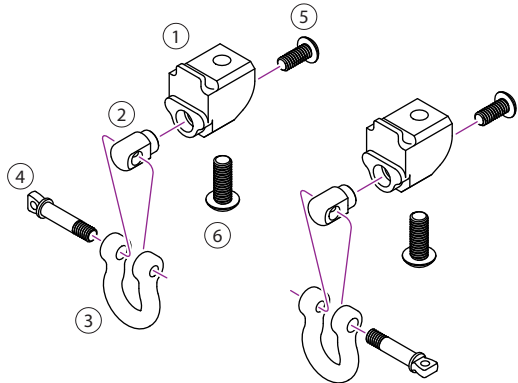

Parts Included:	Qty.
(1) Shackle Retainer	2
(2) Shackle Mount	2
(3) Shackle	2
(4) Shackle Pin	2
(5) M2.5x6 RS Screw #BRASBH2506	2
(6) M3x8 RS Screw #BRASBH3008	2

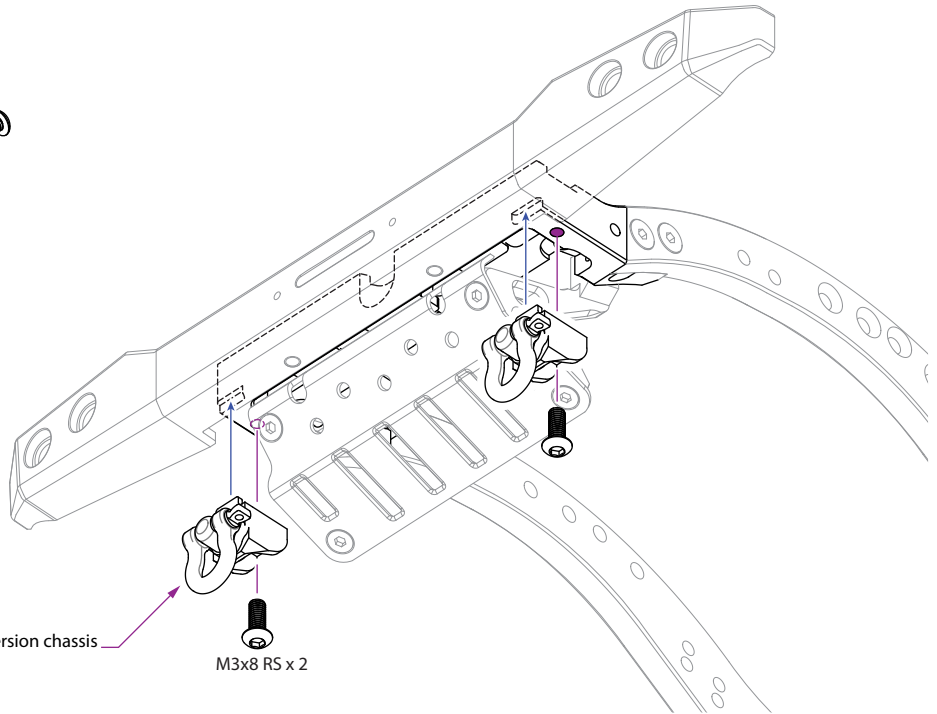

Shackle modules for links version chassis can be used separately.