

INSTALLATION MANUAL

Parts Included:	Qty.	Parts Included:	Qty.
(1) Piston*	2	(10) Spring Preload Adjustor	2
(2) E-clip*	4	(11) Friction Ring*	2
(3) Piston Rod	2	(12) Upper Mount	2
(4) Oil Sealing Ring*	4	(13) Lower Mount	2
(5) Separator*	2	(14) Spring	2
(6) Rod Guide*	2	(15) Spring Retainer	2
(7) C-clip*	2	(16) Pivot Retainer (#BRSHJR)	8
(8) Cylinder	2	(17) Pivot Ball (#BRW750310)	4
(9) Sealing Diaphragm*	2	(18) Pivot Ball Tool (#BRT10053)	1

* Parts included in Rebuild Kit (#BRSPKIT)

